



STEP 1

ATTACH BASE BRACKET
TO LINEAR ACTUATOR FIRST
THEN MOUNT TO CUPBOARD
FLOOR

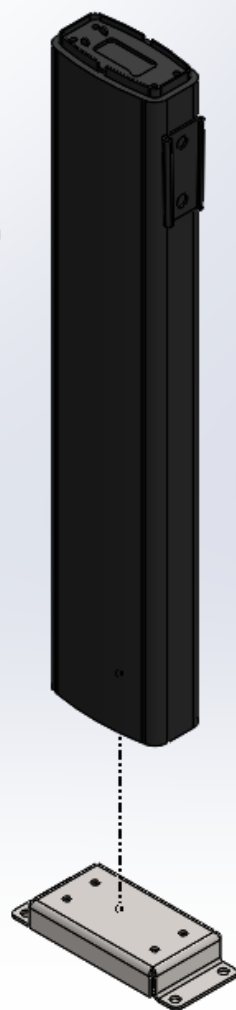

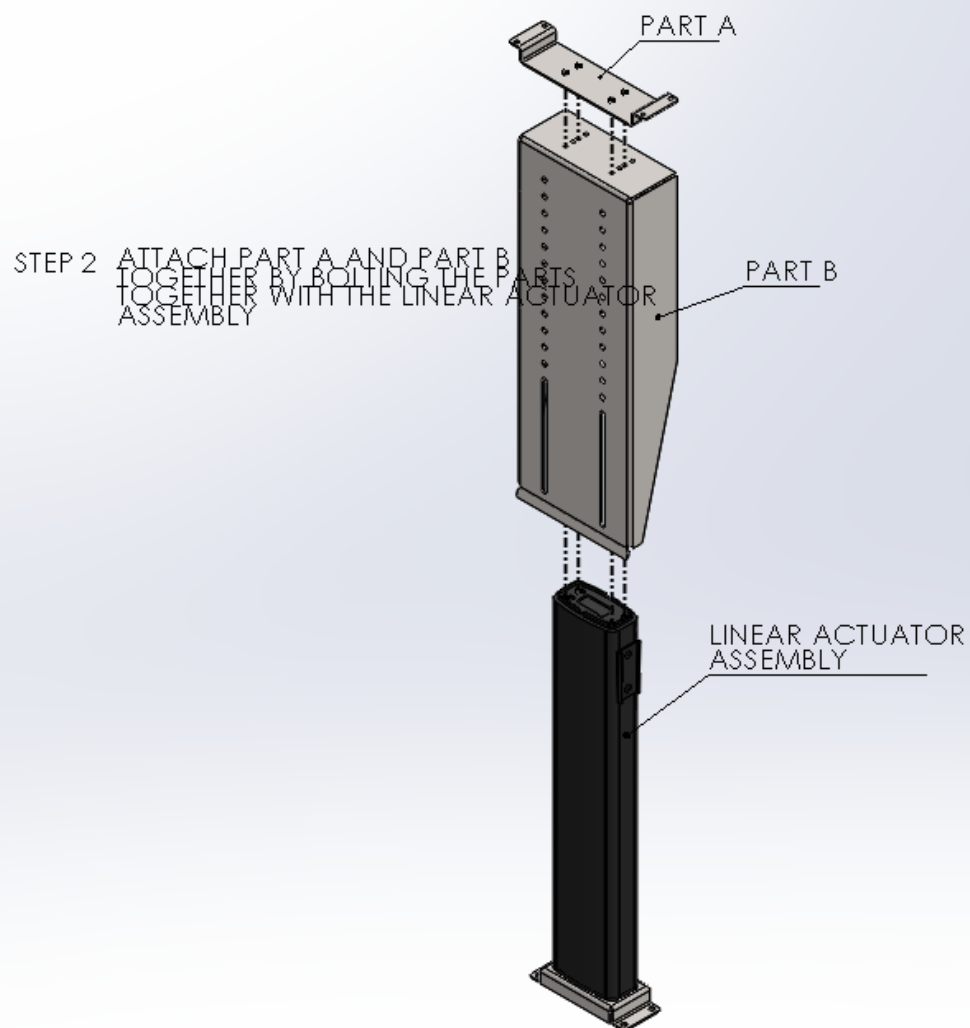

STEP 3

ATTACH MOUNTING BRACKET TO TV LIFT SUB ASSEMBLY
ATTACH TV ARMS TO TV ,THEN HANG TV ONTO THE
MOUNTING BRACKET.

NOTE : IF A WOOD LID IS TO BE ATTACHED TO PART A
THE TV WILL HAVE TO BE SPACED ACCORDINGLY SO AS
NOT TO INTERFERE WITH THE LID

